



## BUTTONS

Press **TV** once to turn on or off the TV.

Press **CBL** to turn on or off the Set Top Box.

**PLAY, REWIND, STOP, FAST FORWARD, RECORD** and **PAUSE** are used for DVR functions.

Press the **MENU** button once to display settings menu.

Use **INFO** to display current channel and program information. Press a second time to see more channel detail and the next program.

Use **NAVIGATION (Arrow)** buttons (right, left, up and down) to move the cursor in the program guide and menu screens.

Press **OK** once after entering channel numbers. (Some TV models will change after entering the channel number without the enter button.) You can also use OK to choose options and to tune programs from the program guide.

Use **GUIDE** to display the program guide.

Use **EXIT** to exit out of the menu and guide or anytime you wish to quit a function.

Use the **LAST** button to change between the last two channel that have been viewed.

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Use **CH +** or **-** to select the next higher (or lower) channel. In the guide these buttons will allow you to page up and down.

The **MUTE** button will shut off sound on the TV.

Press the **"C"** button for Closed Captioning.

Use the **NUMBER KEY PAD** (0-9) to directly select channels.