


ADB Remote Control

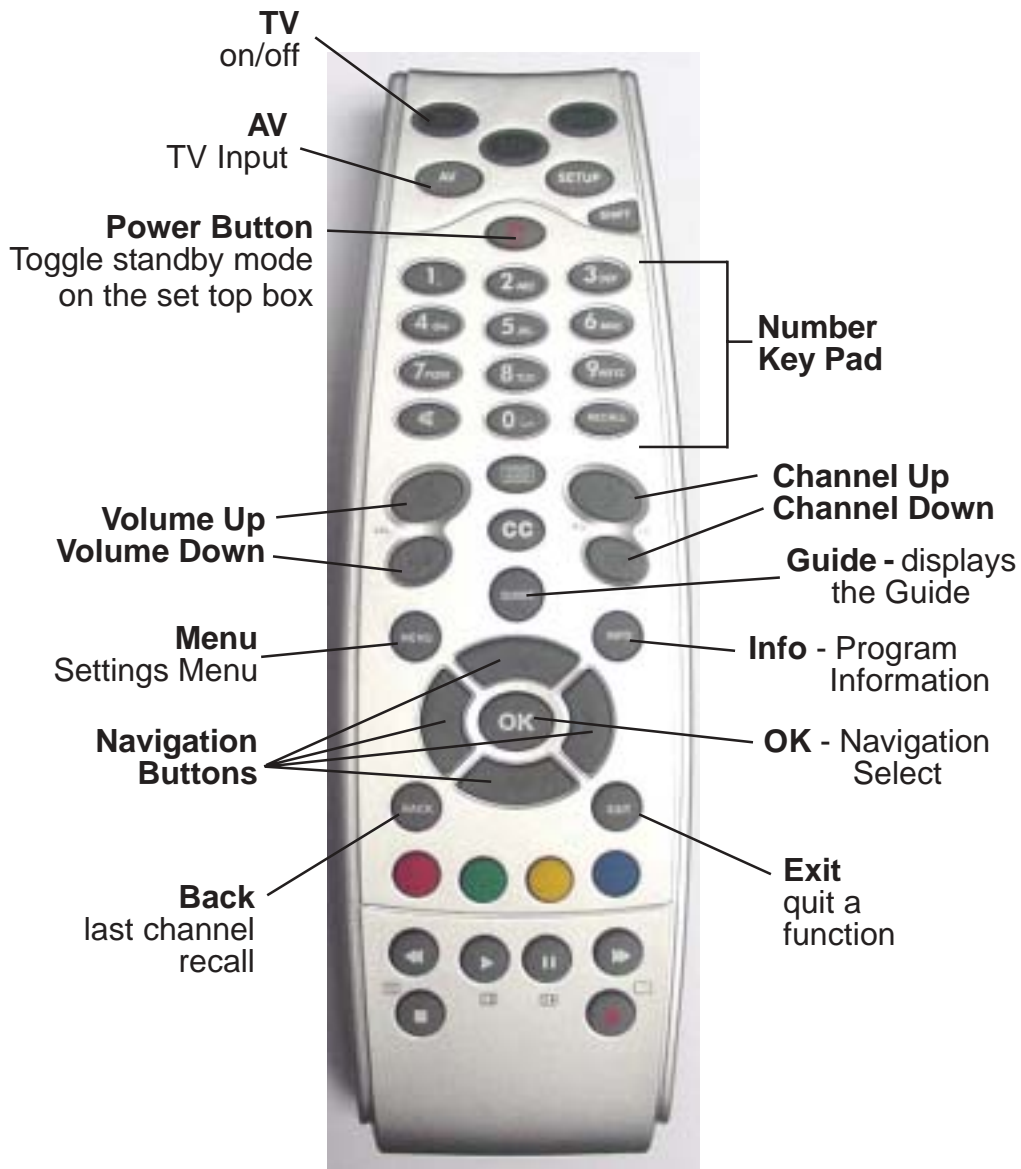

Please Note: The remote control buttons are highly sensitive and while you may select the button only once, it may respond as if you hit it multiple times.

TV and **STB** are used for turning your TV on/off. Please do not use the **DVD** at this time.

AV will switch your TV inputs (video 1, video 2, etc).

SETUP and **SHIFT** are for programming purposes only.

Press **POWER** once to turn on or off the selected home entertainment component.

Use the **NUMBER KEY PAD** (0-9) to directly select channels.

The **MUTE** button will shut off sound on the TV.

The **TV** currently does not work with our system.

The **VIRTUAL KEYBOARD** currently does not work with our system.

CC is for turning the closed captioning on and off. However, this does depend on the TV, channel, and programming for availability. (Some remote models may label this button TXT.)

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Use **PROG +** or **-** to select the next higher (or lower) channel. In the guide these buttons will allow you to page up and down.

Use **GUIDE** to display the program guide. (Some remote models may label this button ACTION.)

Press the orange **MENU** button once to display settings menu.

Use **INFO** to display current channel and program information. Press a second time to see more channel detail and the next program.

Use **ARROW KEYS** (right, left, up and down) to move the cursor in the program guide and menu screens.

Press **OK** once after entering channel numbers. (Some TV models will change after entering the channel number without the enter button.) You can also use OK to choose options and to tune programs from the program guide.

Press **BACK** once to recall the last channel and to page back one screen in the main menu. Pushing BACK repeatedly will let you go back and forth between the last two channels that were viewed.

Use **EXIT** to exit out of the menu and guide or anytime you wish to quit a function.

The **RED, GREEN, YELLOW & BLUE** buttons currently are not used with our system.

The **REWIND, PLAY, PAUSE, FAST FORWARD,** and **STOP** buttons are used with the PVR (Personal Video Recorder).

Please do not press the **TV** as it may change remote settings.