


Amino Remote Control

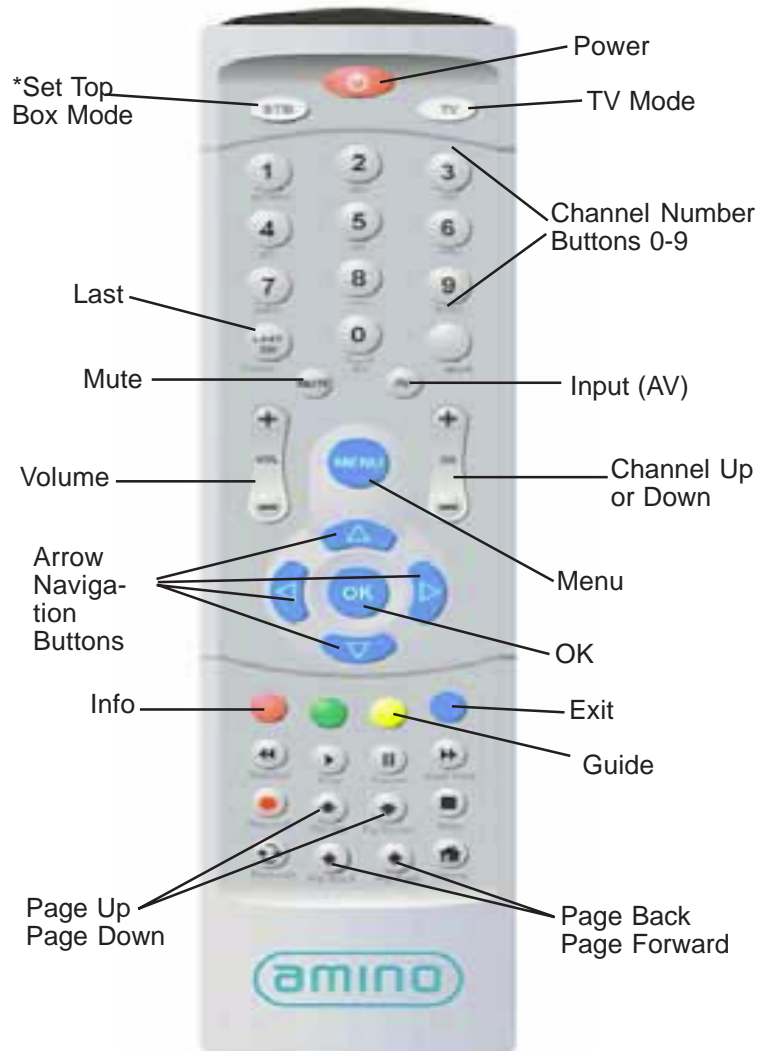

Press **POWER** once to turn on or off the Set Top box or TV.

STB switches the remote control to the set top box mode. (*You must be in Set Top Box mode to change channels in Allendale's Digital TV service.)

TV switches the remote control to the TV mode.

Use the **NUMBER BUTTONS (0-9)** to directly select channels.

Press **LAST** once to recall the last channel and to page back one screen in the main menu. Pushing Last again and again will let you go back and forth between the last two channels that were viewed.

Press **MUTE** once to turn sound off or on.

Input (AV) switches between inputs

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Use **CH+** (or **CH-**) to select the next higher (or lower) channel. (must be in STB mode)

MENU displays the Settings Mode.

Use **ARROW-NAVIGATION buttons** (right, left, up and down) to move the cursor in the program guide and menu screens. Also use to view channels up and down and use left and right to view upcoming programming on the channel banner. (must be in STB mode)

Use **OK** to choose options and to tune programs from the program guide.

Use **INFO** to display current channel and program information. Press a second time to see more channel detail and the next program.

Use **GUIDE** to display the program guide.

Use **EXIT** to exit out of the menu and guide or anytime you wish to quit a function.

Use **PAGE UP** or **PAGE DOWN** to scroll through menu screens and the program guide.

Use **PAGE BACK** or **PAGE FORWARD** go forward and back 12 hours in Guide.

Rewind, Play, Pause, Fast Fwd, Record and Stop buttons are used with PVRs.

(Other non labeled buttons are not used with our Digital TV services.)