


Millennium-Universal Remote Control

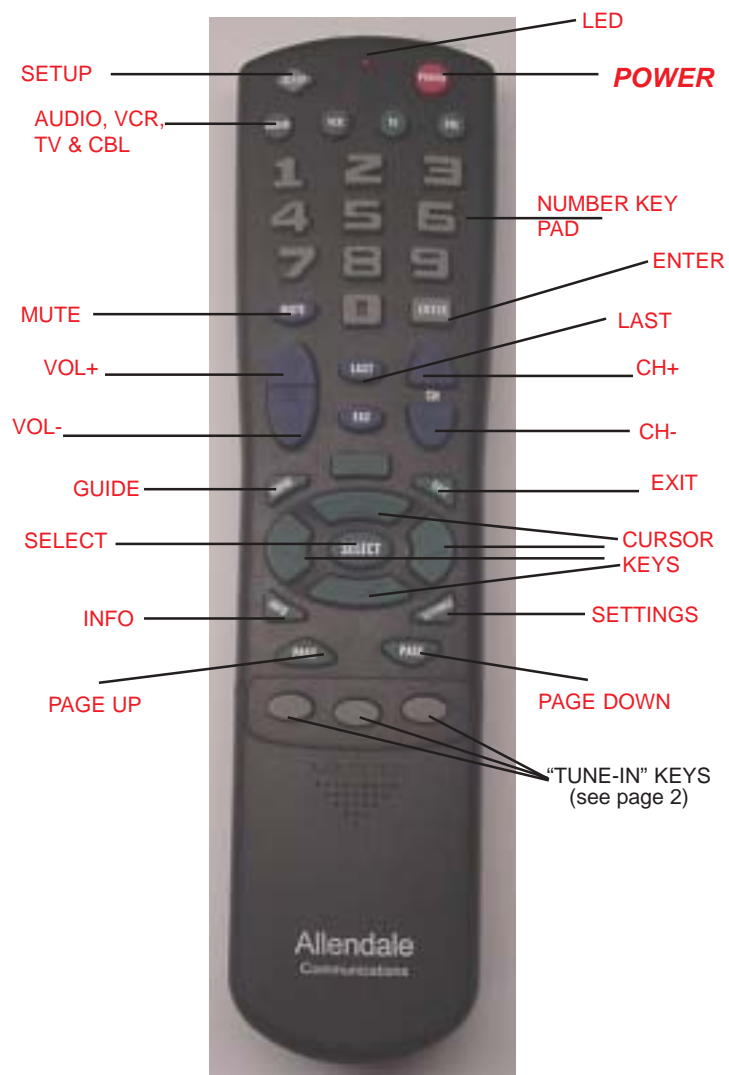

The **LED** (red light) blinks to show that the remote control is working and is sending signals.

Press **AUDIO**, **VCR**, **TV**, or **CBL** once to select a home entertainment component to control.

Press **POWER** once to turn on or off the selected home entertainment component.

Use **SETUP** for all programming sequences.

Use the **Keypad (0-9)** to directly select channels.

Press **MUTE** once to turn sound off or on.

Press **ENTER** once after entering channel numbers. (Some TV models will change after entering the channel number without the enter button.)

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Use **CH+** (or **CH-**) to select the next higher (or lower) channel.

Press **LAST** once to recall the last channel and to page back one screen in the main menu. Pushing Last again and again will let you go back and forth between the last two channels that were viewed.

FAV button (Use with Favorites, however, this button does not work with this video system. Use **SETTINGS** button for Favorites.)

Use **GUIDE** to display the program guide.

Use **EXIT** to exit out of the menu and guide or anytime you wish to quit a function.

Use **CURSOR KEYS** (Green arrow buttons; right, left, up and down) to move the cursor in the program guide and menu screens. Also use to view channels up and down and use left and right to view upcoming programming on the channel banner.

Use **SELECT** to choose options and to tune programs from the program guide.

Use **INFO** to display current channel and program information. Press a second time to see more channel detail and the next program.

Press **SETTINGS** once to display the Settings menu.

Use **PAGE UP** or **PAGE DOWN** to scroll through menu screens and the program guide.

Use the **"TUNE-IN" KEYS** to quickly go to previously programmed channels. (instructions follow on page 2)

PROGRAMMING THE “TUNE-IN” KEYS FOR SPECIFIC CHANNELS

The Millennium 4 includes three “Tune-In” keys (located directly below the **PAGE** keys). Each can be programmed to remember three of your favorite channel settings for a total of nine channels. If you want to change the channels in a previously-programmed “Tune-In” key, you’ll need to clear the key first (see below).

To Program a “Tune-In” Key:

1. On the Millennium 4, press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
2. Enter **9 - 9 - 5**. The LED will blink twice. Then select a “Tune-In” key and press it once.
3. Press **CBL** once followed by the channel number to be programmed (e.g., 3 – 9).

*NOTE: If you are programming a channel for a Digital Cable Converter, you need to enter all channels in a 3-digit channel format. For example, if the desired channel is 39, then enter it as **0 – 3 – 9**.*

4. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
5. To add another channel, repeat steps 1 through 4 substituting the new channel to be added in step 3.

NOTE: Programming more than three channels onto the same “Tune-In” key will overwrite previous settings.

To Clear a “Tune-In” Key:

1. On the Millennium 4, press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
2. Enter **9 - 9 - 5**. The LED will blink twice. Then select a “Tune-In” key you want cleared and press it once.
3. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
4. This “Tune-In” key is now clear and ready for reprogramming (see above – *To Program a “Tune-In” Key*).
5. If desired, repeat steps 1 through 4 to clear another “Tune-In” key.