

PROGRAMMING TV CONTROL



Ace Communications Universal
Remote Control
-Millennium 4

Locate the brand name of your TV in the *TV Brand Codes*.

The brands are listed in alphabetical order. You will use one of these codes to program the Universal Remote to operate your TV:

1. Turn on the TV.
2. On the Millennium 4, press **TV** once. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Millennium 4 at your TV and press **POWER** once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works.

*NOTE: Remember, to use the Millennium 4 to operate your TV, press **TV** first.*

Other programming for VCRs, DVDs, etc, are listing in the Digital TV Users Guide that you received from Ace Communicaitons when you had the Digital TV service installed.

If you do not know the code:

SEARCHING FOR YOUR CODE

If your TV, VCR or DVD Player, Cable Converter, or Audio Component does not respond to the Millennium 4 after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. Turn on your TV.
2. On the Millennium 4, press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter **9 - 9 - 1**. The LED will blink twice.
4. Aim the remote control at the TV and slowly alternate between pressing **POWER** and **TV**. Stop when the TV turns off.

NOTE: In the search mode, the Millennium 4 will send IR codes from its library to the selected component, starting with the most popular code first.

5. Press **SETUP** once to lock in the code.
6. To search for the codes of your other components, repeat steps 1 through 5, but substitute the appropriate key (i.e., **VCR**, **CBL**, or **AUDIO**) for the (VCR or DVD, Cable, or Audio) component you are searching for.