



ADB Remote Control

PROGRAMMING TV CONTROL

Locate the brand name of your TV in the *TV Brand Codes*.

The brands are listed in alphabetical order. You will use one of these codes to program the Universal Remote to operate your TV:

1. Turn on the TV.
2. On our ADB remote, press **TV** once. Press and hold **RCU SETUP** until the LED blinks twice.
3. Enter the TV Brand code for your TV. If you perform this procedure correctly, the LED will blink twice.
NOTE: If not, the key emits one long blink. Then you will have to repeat steps 2 through 3 and try entering the same code again.
4. Press **POWER**. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works.

AUTOMATIC SEARCH

1. Switch on your TV. Then press the appropriate mode key, **TV** if you are setting up your TV.
2. Press and hold **RCU SETUP** until the mode key blinks twice.
3. Press **9 - 9 - 1**. The mode key blinks twice.
4. Aim the remote at the device and press **Power**.
5. Press **+** and **-** repeatedly until the device is switched off.
6. Press **Power** to turn the TV on.
7. Next, press **RCU SETUP** to store the code for your device. The mode key blinks twice. Your remote control is now programmed to operate your TV set.