


## RCA Remote Control Buttons

(it is important to always choose the correct **MODE**)

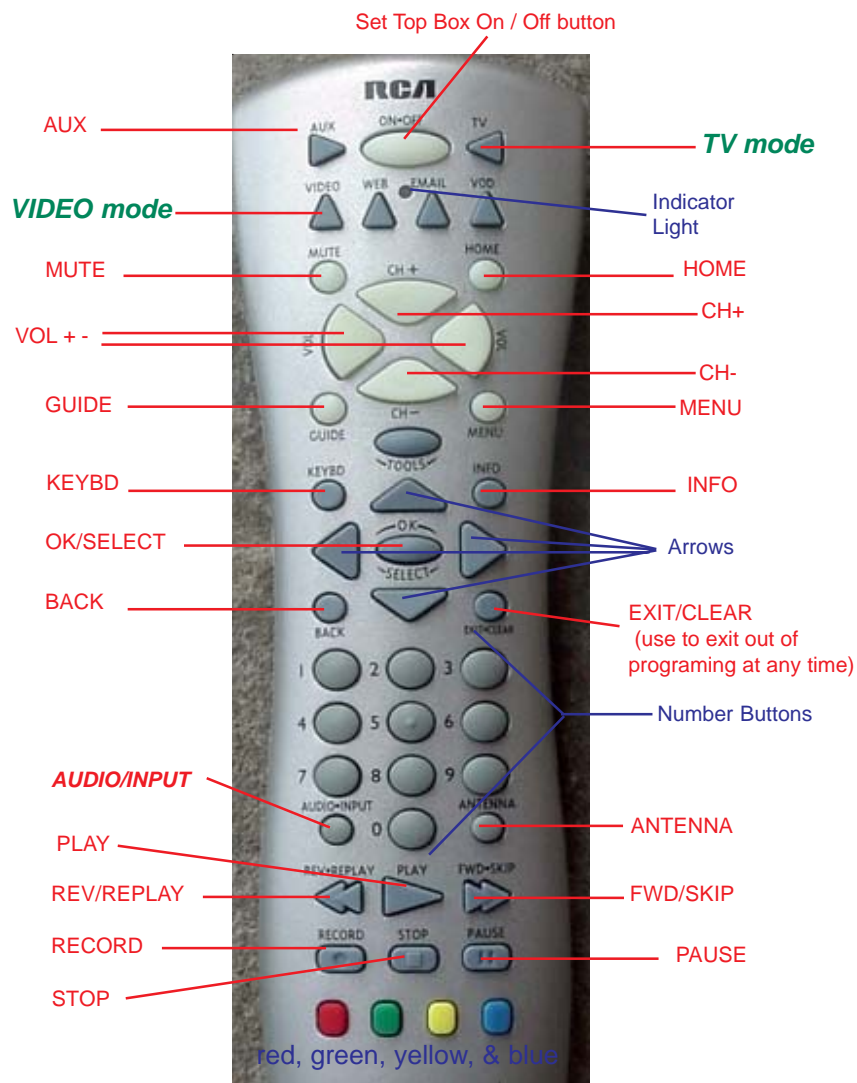

Note: The **VIDEO** mode button must be pushed to control the decoder box functions.

**AUX** Puts the remote in AUX mode. Can also be programmed to operate some compatible products (A/V receiver, DVD, VCR, etc).

**ON•OFF** Turns the component on or off when the remote control is set to operate that component.

**TV** Turns on a compatible RCA, GE, or Proscan TV and puts the remote control in TV-operating mode. Also used with the ON•OFF button to turn on/off a different brand of TV (if programmed).

**VIDEO** Turns on the decoder in TV mode and shows TV programming.

**Indicator** Indicates the programming mode when programming the remote to control components.

**MUTE** Reduces the TV's volume to a minimum level on compatible TVs or A/V receivers.

**HOME** In Web mode, takes you to your home page.

**VOL < and >** Raises and lowers the volume of some compatible TVs or A/V receivers (if programmed).

**CH + and CH -** Selects next higher or lower channel in the channel list.

**GUIDE** Displays the decoder program guide, if your service provider offers one.

**MENU** Displays the on-screen menu system.

**KEYBD** Brings up the on-screen keyboard or removes it. Also acts as an enter button when using the on-screen keyboard.

**INFO** Shows on-screen information of the decoder, VCR, TV, DVD player, etc. (whichever component is set as the remote control's active device).

**OK•SELECT** In on-screen menus, this button acts as an *Enter* button (used in conjunction with the remote control's arrow buttons). This button selects the highlighted on-screen menu item.

**Arrows** Move the on-screen highlight, and enter data such as letters or numbers in certain menus.

**BACK** In Web mode, goes to the previous web page. In menus, goes back to the previous screen or menu. In TV mode, may return to the previously viewed channel.

**EXIT•CLEAR** Exits or clears menus.

**(0-9) Number buttons** Select channels by pressing the number buttons.

**AUDIO•INPUT** In decoder mode, changes the program's audio language, if available. In VCR or TV mode, selects between the Video Input Channel and the tuner for compatible components. Video Input Channel refers to the signal coming from the component connected to the audio/video input jacks on the VCR or TV.

**ANTENNA** In decoder mode, turns off the decoder signal to allow other signals to pass through. In VCR mode, functions as the TV/VCR button.

**PLAY** Plays video.

**REV•REPLAY** Rewinds video or tape when in stop mode. Searches backward during playback mode.

**FWD•SKIP** Fast forwards video in stop mode. This button also searches forward if pressed during playback.

**RECORD** Starts record mode for a compatible VCR.

**STOP** Stops the current function (record, playback, rewind, etc).

**PAUSE** Pauses playback or recording.

**Red, green, yellow, and blue buttons (at the bottom of the remote)**

Specific functions defined by your service provider.

**EMAIL, VOD, TOOLS** and **WEB** buttons are not used with Allendale Communications Digital TV System.