

## PROGRAMMING TV CONTROL



Allendale Communications  
Universal Remote Control  
-Millennium 4

Locate the brand name of your TV in the *TV Brand Codes*.

The brands are listed in alphabetical order. You will use one of these codes to program the Universal Remote to operate your TV:

1. Turn on the TV.
2. On the Millennium 4, press **TV** once. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.

*NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.*

4. Aim the Millennium 4 at your TV and press **POWER** once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works.

*NOTE: Remember, to use the Millennium 4 to operate your TV, press **TV** first.*

Other programming for VCRs, DVDs, etc, are listing in the Digital TV Users Guide that you received from Allendale Communicaitons when you had the Digital TV service installed.

### **If you do not know the code:**

### SEARCHING FOR YOUR CODE

If your TV, VCR or DVD Player, Cable Converter, or Audio Component does not respond to the Millennium 4 after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. Turn on your TV.
2. On the Millennium 4, press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter **9 - 9 - 1**. **The** LED will blink twice.
4. Aim the remote control at the TV and slowly alternate between pressing **POWER** and **TV**. Stop when the TV turns off.

*NOTE: In the search mode, the Millennium 4 will send IR codes from its library to the selected component, starting with the most popular code first.*

5. Press **SETUP** once to lock in the code.
6. To search for the codes of your other components, repeat steps 1 through 5, but substitute the appropriate key (i.e., **VCR**, **CBL**, or **AUDIO**) for the (VCR or DVD, Cable, or Audio) component you are searching for.