

## PROGRAMMING TV CONTROL



**Allendale Communications  
Universal Remote Control**

Locate the brand name of your TV in the *TV Brand Codes*.

The brands are listed in alphabetical order. You will use one of these codes to program the Universal Remote to operate your TV:

1. Turn on the TV.
2. On the Millennium 4, press **TV** once. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.  
*NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.*
4. Aim the Millennium 4 at your TV and press **POWER** once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works.

*NOTE: Remember, to use the Millennium 4 to operate your TV, press **TV** first.*

Other programming for VCRs, DVDs, etc, are listing in the Digital TV Users Guide that you received from Allendale Communicaitons when you had the Digital TV service installed.